

Choices Height Adjustable Tables Pneumatic Table Gas Cylinder Replacment

Trendway >

Holland, MI
800 748 0234
Trendway.com

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED:

- 3/16" Allen Wrench
- 17 mm Socket Wrench

CAUTION!!!

Contents under pressure. Be sure that the legs are fully extended before disassembling the table.

DISASSEMBLY:

- Refer to INS530 for Pneumatic Table Installation Instructions.
- Remove the Leg containing the Pneumatic Cylinder and remove the Foot from the Leg assembly.
- Using the 17mm Socket Wrench remove the 17mm nut from the bottom of the Leg assembly. (FIG. 1)
- Using the 4mm Allen Wrench remove the (3) M6 x12mm Washer Headed Screws inside the top of the Leg. (FIG. 2)
- Slide out the Retaining Plate. (FIG. 2 & 3)
- Pull out the Pneumatic Cylinder. (FIG. 4)

ASSEMBLY:

- Reverse the above steps with the new Cylinder and re-assemble the Table according to INS530.

FIG. 1

17mm
Nut

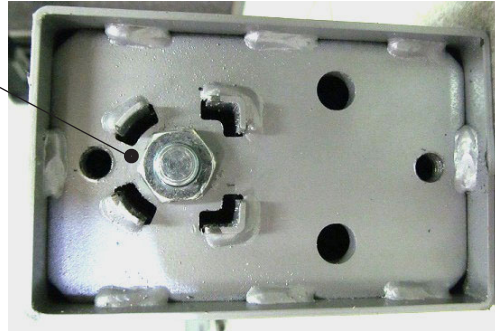


FIG. 2

M6x12mm
Washer
Head Screw

Retaining
Plate

Slide Out



FIG. 3

Exposed
Cylinder

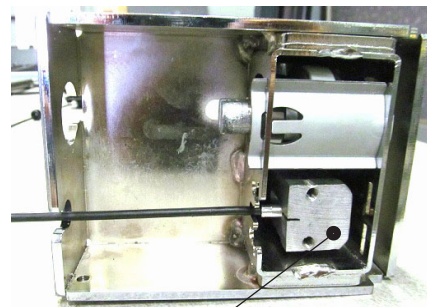


FIG. 4

Pneumatic
Cylinder

Pull
Out

